## Westrim Architectual Window Surround Trim Finish off your project with cost effective quality trims that not only provide aesthetic value but also aids in weather proofing.

- Weather resistant trimming to suit ALL frame types (Residential or Commercial
- Allows for easier installation of claddings against window / door frames on site
- Provides 50mm fin for fixing into timber/steel framing making installation more efficient
- Powdercoat/Anodise to match window frame or match wall colour
- Three Snap on beads to choose from for different cladding types
- Architectural clean modern lines for quality finish



For more photos and information head to https://glasscowa.com.au/westrim





GAS148 - L Frame - Used in all applications to provide a fin and weatherproofing of Window and Door Frames, meterboxes, timber door frames. Mitre cut to provide a continuous fin completely around the frame. Installed in the factory prior to delivery of Windows unless used in a retrofit situation. Can be fitted to existing frames fin or fixed in alternate position.


GAS147 - 24mm Bead - Snap on bead to suit cladding no greater than 24mm thick.


GAS149 - 18mm Bead (Suit Colourbond) - Snap on bead to suit cladding no greater than 18mm thick (usually corrugated colourbond).

GAS150 - 12mm Bead - Snap on bead to suit cladding no greater than 12mm thick (usually compressed sheet).

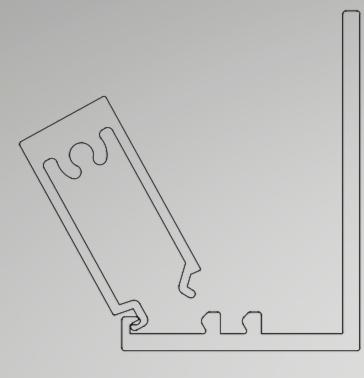

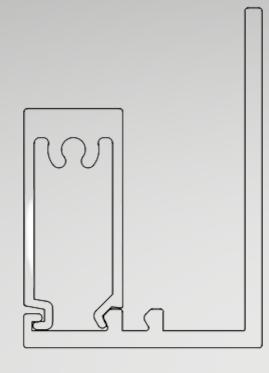

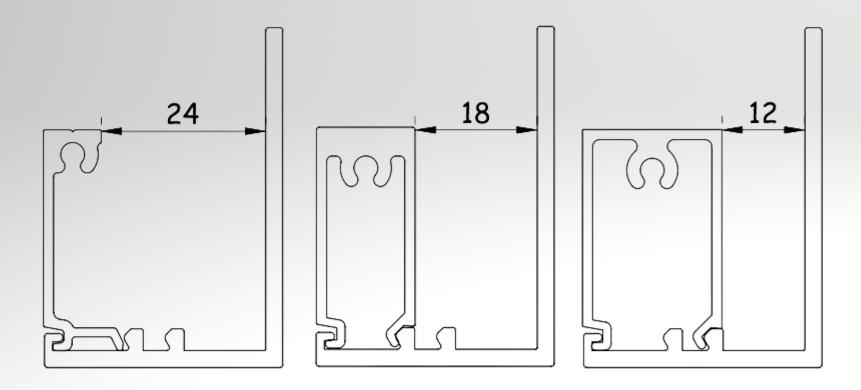

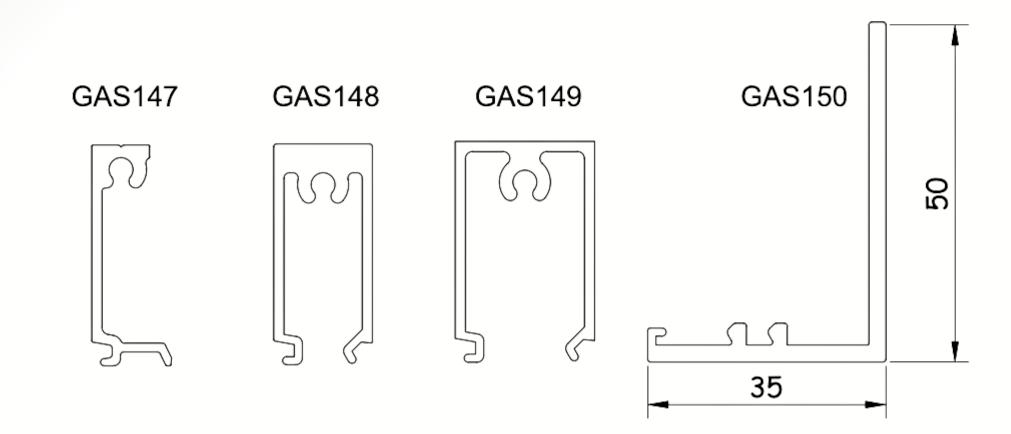

18mm Bead

12mm Bead

L Frame

